

Application Notes 396-DRM

BALVER ZINN[®]
COBAR[®]

EC Date.....: 09/10/09
Release.....: 01.1


Description product

396-DRM is a VOC-free flux for wave soldering applications. The flux has very clean residues and good solder properties for use with industrial and consumer applications. The flux has a moderate activation system (ORM0).

See the Product Data Sheet (PDS) for the specification of this product. An up to date version of the PDS for most current products is available through our website at www.cobar.com. See the Material Safety Data Sheet (MSDS) before handling and/or using this product.

Receiving and storage

Exposure to heat, frost or rain should be avoided. Do not leave shipments outside. An air-controlled room usually is adequate for storage. Shelf-life is best guaranteed at temperatures below 20 °C and RH below 70%. Fluxes are shelf-life items and should be managed as a FIFO-supply.

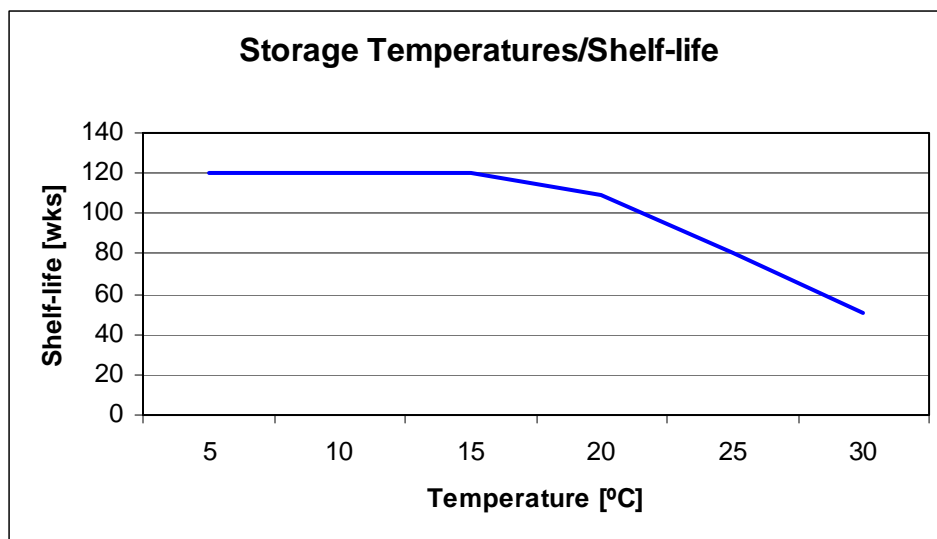

Flux that has been exposed to frost should be placed in a room with central heating for at least 4 hours and shaken before use.

Handling

The recommended ambient conditions for applying the flux are 18-25 °C. Prior to use the flux: tank, spray nozzle, fingers, pallets/carriers and tubes should be cleaned properly. If pneumatic air is used to apply the flux, the air must be dry, free of oil and temperature controlled. A water and oil separator for the supplied air is strictly necessary.

It is important to start with components and board materials that meet requirements for solderability and ionic cleanliness.

Application Notes

396-DRM

BALVER ZINN[®]
COBAR[®]

EC Date.....: 09/10/09
Release.....: 01.1


Flux applications

Spray fluxing is the preferred application to apply this flux. Make sure that the unit has a stable and uniform spray-cone. The flux should have the finest droplets at the lowest possible setting for the atomizing air pressure. (Low air pressure give bigger and unstable droplets; high air pressure cause bouncing effects of the flux against the PCB surface).

Use a scrap/bare board to set-up the spray parameters. Turn the board upside down after spraying for inspection. It is essential that a continuous, uniform spray pattern has been deposited all across the board.

Preheat profile

The top side (component side) board temperature measured at the end of the preheat zone should be between 90-150°C. To ensure a smooth and complete evaporation of the flux a linear profile with a temperature gradient $< 2 \text{ }^\circ\text{C/s}$ is recommended.

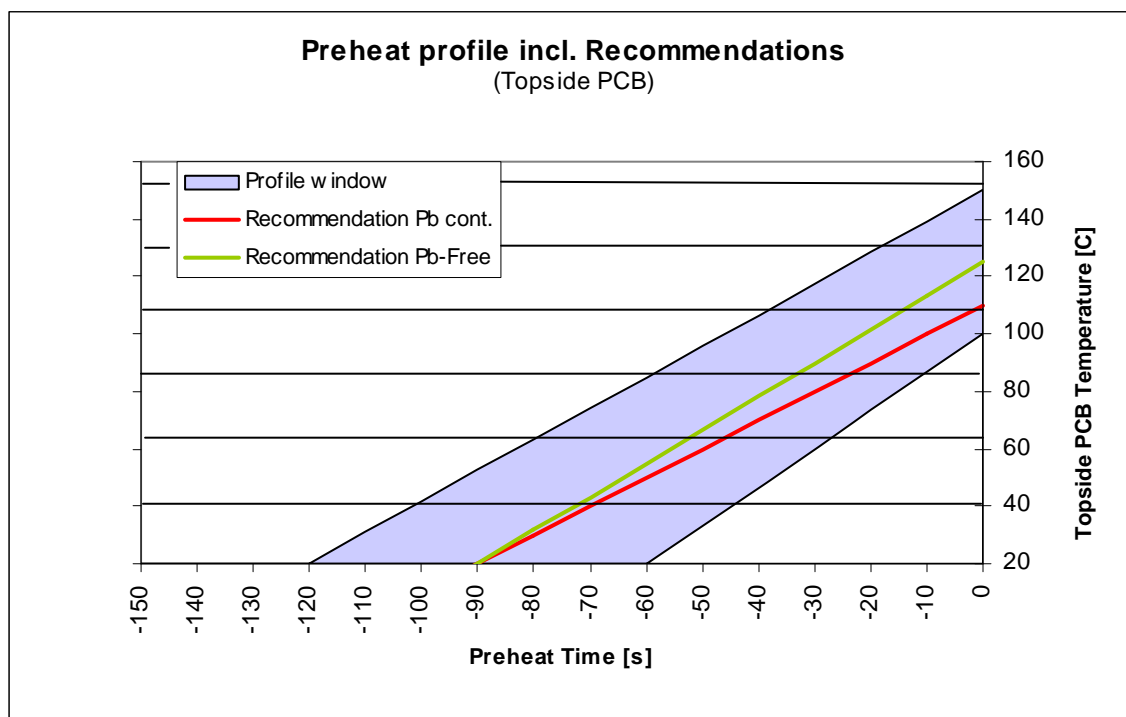

Soldering

In order to obtain clean and well-soldered assemblies, a contact time in the solder wave between 2.5 and 4 seconds is recommended. This time is temperature depended. For a typical SnPb process (solder temperature 250 °C) the initial setting is approximately 2.5 seconds. For lead-free (solder temperature 260 °C) up to 4 seconds depending on the application.

Application Notes 396-DRM

BALVER ZINN[®]
COBAR[®]

EC Date.....: 09/10/09
Release.....: 01.1

Conformal coatings

When properly processed, this flux is compatible with many conformal coatings based on acrylic, polyurethane and silicone resins.

Disclaimer:

The information given in this publication has been worked up to the best of the knowledge of Cobar as well as taking into consideration the applicable laws and regulations. We cannot anticipate all conditions under which this information and our products or the products of other manufacturers in combination with our products may be used. We accept no responsibility for results obtained by the application of this information or the safety and suitability of our products alone or in combination with other products. Users are advised to make their own tests to determine the safety and suitability of each such product or product combination for their own purposes. Unless otherwise agreed in writing, we sell the products without warranty, and buyers and users assume all responsibility and liability for loss or damage arising from the handling and use of our products, whether used alone or in combination with other products.